


IMPORTANT – PLEASE ENSURE:

- YOU HAVE THE CORRECT **PRODUCT** KIT FOR YOUR VEHICLE BEFORE COMMENCING WITH THIS INSTALLATION
- ALL WORK IS CONDUCTED BY A COMPETENT INSTALLER
- ANY BARE METAL IS TREATED WITH WAXOYL
- FOR CAB INSTALLATIONS - ANY EXTERNAL PROJECTION GREATER THAN 5MM MUST HAVE AN EDGE RADIUS OF 2.5MM OR MORE (EG, CAB DOOR CYLINDERS / REP-LOCK BEZELS / CAB HANDLE PLATES).

IF UNSURE, PLEASE CONTACT THE TECHNICAL TEAM ON: - 01474 560077.




KIT CONTENTS



1 x Hooklock
Lockcase & Gasket



1 x Keep Plates

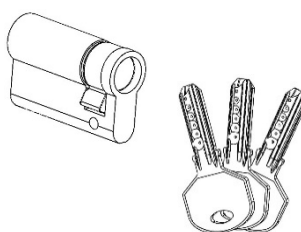


1 x 60mm Cylinders
3 x Keys



2 x 4.8mm x 17mm
Lockcase Rivets



4 x 4.8mm x 8mm
Keep Plate Rivets

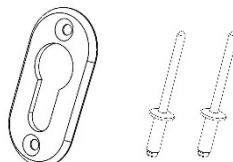

1 x Cylinder Trims
2 x Black 3.5mm Rivets

This kit also fits
the following
vehicles:
Vw Transporter 2025>

**SAFETY
INFORMATION**

Please ensure that you
wear the correct PPE
when fitting the
product to the vehicle.



RECOMMENED TOOLS



Tape Measure



Adjustable
Set Square




Drill



Hand Rivet
Gun



Waxoyl




Air Saw

**ENVIRONMENTAL
INFORMATION**

Please dispose of the
packaging responsibly



INSTALL SITE

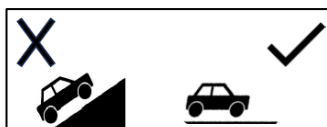

Ensure the vehicle is:
- On level ground
- In a safe location

Whilst every effort has been made to ensure the accuracy of details and information provided within drawings and installation guides contained in the Goods supplied by Locks4Vans (the Company), the Company gives no warranty in relation to the drawings and installation guides contained in the Goods and the Company accepts no liability for any inaccuracies or vehicle variations in the drawings. The information provided is supplied as a general guide only. It is the sole responsibility of the installation company and or their fitter to check suitability of product for vehicle, application and component parts of kit and accuracy of any supplied information before commencing installation.
All copyright in the information and drawings supplied by Locks 4 Vans Ltd are owned exclusively by Locks 4 Vans Ltd and the copying of such drawings in any format is strictly prohibited without the prior written consent of Locks 4 Vans Ltd.

Photo 1

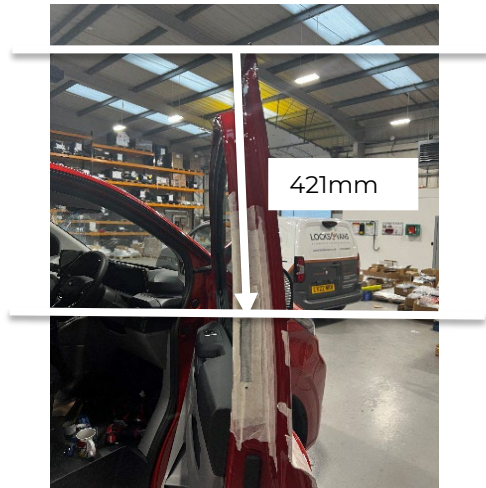


Photo 2


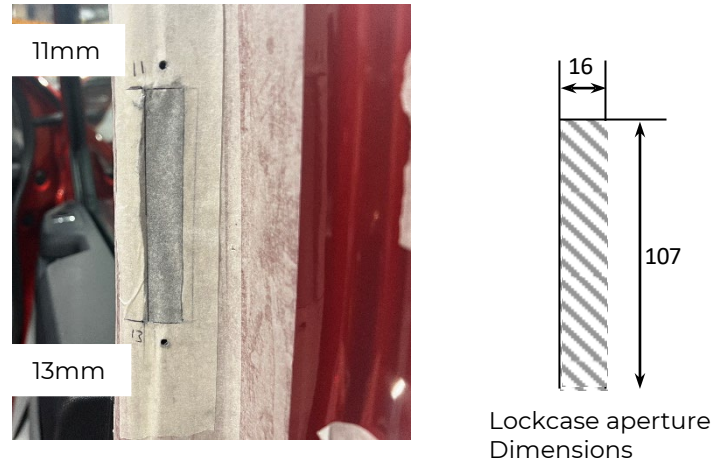


Photo 3




Photo 4

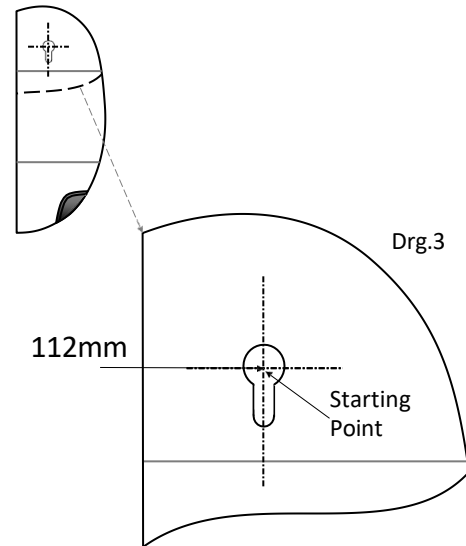

INSTALLATION GUIDE

- Photo 1- Firstly, start by masking up the area you're going to be working on. Measure 421mm from the top of the door down. This will mark the top of your lock case aperture. Then measure 107mm down
- Photo 2- Using a set square set the top too 11mm from the INSIDE face of the door. Then 13mm to find the bottom then use the lockcase diagram to complete your aperture size
- Photo 3-Following this Using the top of "L4V" logo on the Lockcase measure this across to help find your horizontal line for your cylinder
- Photo 4- Using a set square set it to 112mm. This will help you find your vertical line.
- When happy drill out cylinder hole until the cylinder fits and is in a working order with the Lockcase.
- Dry fit Lockcase with masking tape or a self-tapper

Photo 5

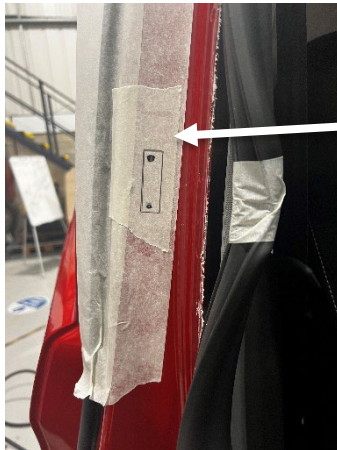

CAUTION WHEN
CUTTING! WIRING
LOOM

Photo 6



Photo 7

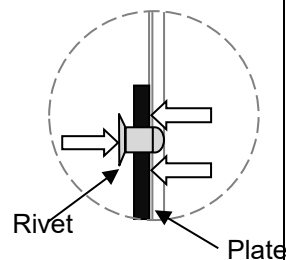


Photo 8



- Photo 5/6 - Dab the top and bottom of the deadlock bolt with a marking residue (paint or Vaseline). This will mark your top and bottom and give you a guide where to locate the keep.
- Before drilling be aware of the wiring loom that is located within the pillar. When happy mark out hole and drill open your aperture.
- Photo 7/8 - When happy fit Lockcase, keep, and barrel trim as shown in
- **IMPORTANT NOTE:** Only drill through the OUTER skin for the Keep Plate