


IMPORTANT – PLEASE ENSURE:

- YOU HAVE THE CORRECT SHIELDING KIT FOR YOUR VEHICLE BEFORE COMMENCING WITH THIS INSTALLATION
- ALL WORK IS CONDUCTED BY A COMPETENT INSTALLER
- **ANY BARE METAL IS TREATED WITH WAXOYL**

IF UNSURE, PLEASE CONTACT THE TECHNICAL TEAM ON: - 01474 560077.




KIT CONTENTS



1 x Hook lock




1 x 5mm Spacer

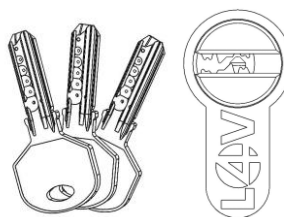

1 x 50mm Cylinder and 3 x keys



6 x rivets



1x Barrel trim



1x Keep

This kit also fits the following vehicles:

VW Transporter 2025>

SAFETY INFORMATION

Please ensure that you wear the correct PPE when fitting the product to the vehicle.



RECOMMENDED TOOLS



Die Grinder



Drill



Air saw



Rivet Gun



Tape Measure

INSTALL SITE



Ensure the vehicle is:

- On level ground
- In a safe location

ENVIRONMENTAL INFORMATION

Please dispose of the packaging responsibly



Photo 1



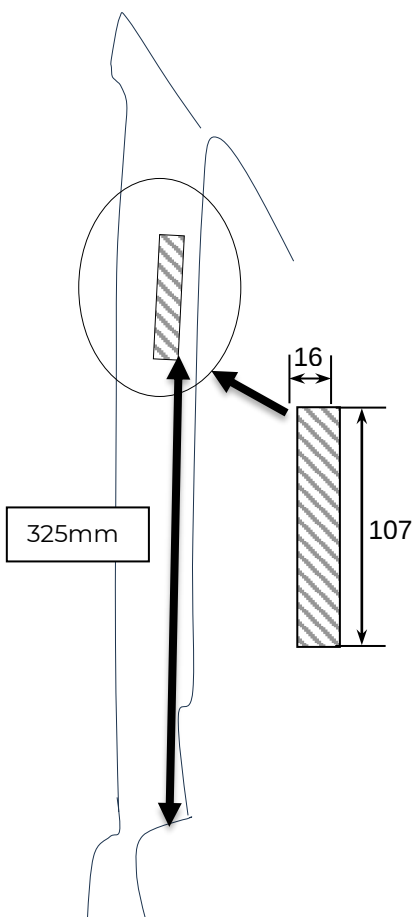


Photo 2

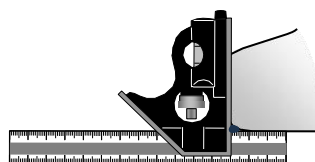

PLAN VIEW
EXAMPLE ONLY!

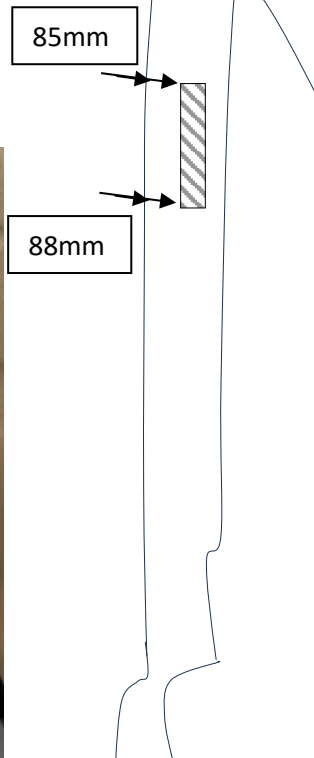

Installation Guide

- Photo 1&2 - Cut Lock case aperture using the given measurements. Double check workings out before proceeding.
- When happy open aperture out. Temporary fit Lockcase using masking tape.
- Photo 3 - shows how to find cylinder location. Use the escutcheon as a template for your cylinder.
- Throw the hook over and mark the tip with paint or grease.
- Unlock the hook close the door and mark your inner post.
- photo 5 - The illustration shows where to place your keep.
- When happy drill through first and second skin.
- Throw hook to ensure this works.

Photo 3

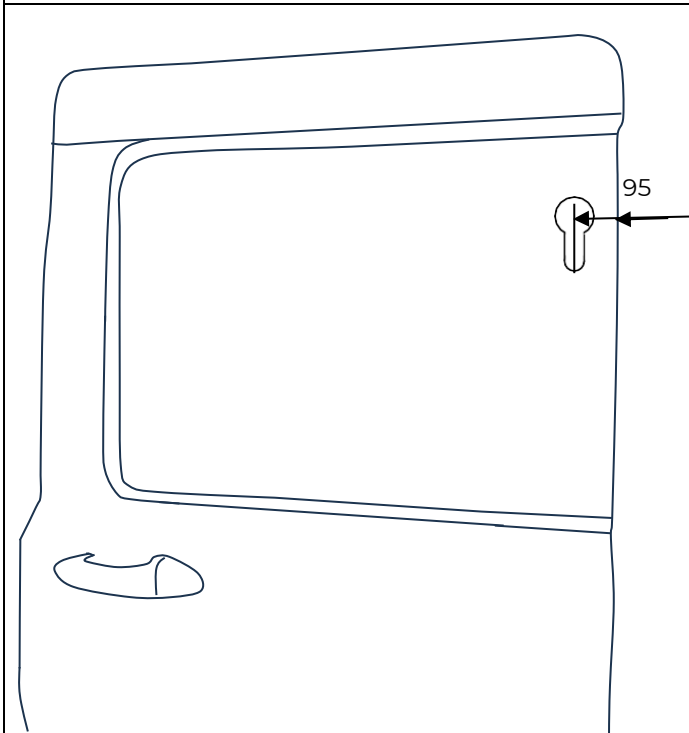


Photo 4



Photo 5

Caution:

-There is a wiring loom that runs down inside the 'C' post, where the strike hole is to be cut out. -Ensure that Wiring Loom is pinned back and not likely to interfere with the Hook deployment.

